

TRIM-TEX

847 Spray Adhesive Installation Instructions

- Specifically designed for use with Trim-Tex bead products
- Specially formulated web spray creates a stronger bond than mist spray adhesives
- Will not bleed through taping compound

How It Works

847 Spray Adhesive is a high tack, pressure sensitive spray adhesive designed and tested by our engineers to be used with Trim-Tex vinyl beads. Trim-Tex 847 is a must for installing expansion products such as Magic Corner, Hideaway Expansion and 093V Expansion.

Installation

Shake well before use. Apply to a clean surface. Point valve toward surface and spray from a distance of 6 to 10 inches. Keep can moving to avoid a buildup of spray on the surface. Apply 847 spray to the bead and then to the drywall. The adhesive must still be wet to allow you to position the bead. If adhesive dries and is no longer tacky the adhesive will not bond properly. Respray both surfaces. Once in position, pressure the mud legs of the bead to the wall using the pressuring tool which is included in the magic corner kit or the handle of your taping knife. Allow the adhesive to tack and go back a second time to pressure the legs. Staple mud legs every 6-8" with 1/2" long staples.




STOCK NUMBER

PCS PER BOX

847

12

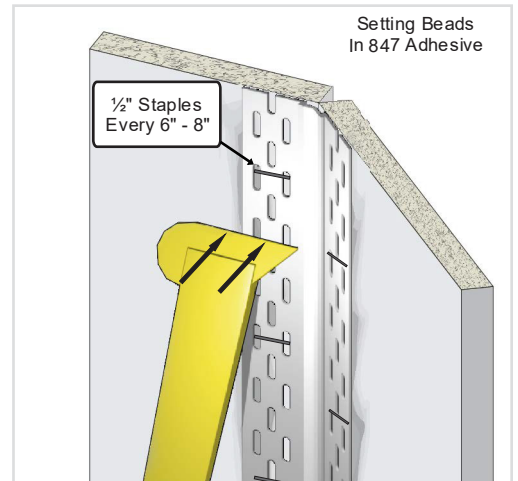

www.trim-tex.com

1-800-874-2333